



Your handy guidebook.
emporiaCONNECT.

emporia

AN OVERVIEW OF YOUR MOBILE PHONE

Looking at the front of the closed phone in its desktop charger

Camera lens/viewfinder

Back-lit symbols (LED)



(see page 17)



(see page 64)



(see page 35)

Outside screen



Looking at the back of the closed phone in its desktop charger

Charger Jack

(see page 17)

Tourch (LED)

♥ Emergency button

(see page 89)

Charger Jack

(see page 17)



Opened-up Phone

Loudspeaker

Screen (see page 24)

 **Key** (see page 21)

Navigation Keys (see page 22)

 **Key** (see page 22)

 **Favourite Key** (see page 81)

 **Menu Key** (see page 21)

 **Photo Key** (see page 40)

Keypad (see page 30)

 **On/Off Button** (see page 25)



**The right side of
the closed Phone**



 **Torch**

On / Off

 **Kamera Taste**

(see page 40)

**The left side of
the closed Phone**



 **Button**

Turn volume up

 **Button**

Turn volume down
Put phone on mute
(see page 28)



What separates us: 739 km.
What connects us: **emporiaME.**



The new kind of sharing. emporiaME: the app to share all that is important with everybody close to your heart – special moments, contacts and appointments.

eME offers you:

Easy, effective and emotional communication
with the handset emporiaCONNECT.

- View pictures together
- Remote maintain phone book
- Enter appointments in the calendar
- Get reminders for medicine
- Offers security



CONTENTS

1	For Your Safety	15
2	First Steps.....	16
2.1	Installing your SIM-card and battery.....	16
2.2	Charging your battery	17
2.3	Turning on your phone; First use	18
2.4	Information for Beginners.....	21
2.5	Screen Symbols in Standby Mode	24
3	Phone Settings	25
3.1	Switching on your phone	25
3.2	Switching off your phone	25
4	Calling	26
4.1	Making a call	26
4.2	Ending a call.....	26
4.3	Answering a call	26
4.4	Redialling from your Call List	27
4.5	Putting the ring-tone on mute for an incoming call	28
4.6	Hands-free Talking.....	28

5	Messages	29
5.1	Writing Text Messages (SMS)	29
5.2	Entering Texts	30
5.3	Sending Messages.....	33
5.4	Receiving and Reading Messages	35
5.5	Messages with Pictures (MMS).....	36
5.6	Unsent Messages	37
5.7	Inserting Templates.....	37
6	Camera	38
6.1	Taking Photos	38
6.2	Camera Options	39
6.3	Viewing Photos.....	40
6.4	Making Use of Your Photos.....	41
7	Phone book	44
7.1	Storing Numbers and Names.....	45
7.2	Changing Numbers and Names	47
7.3	Making a Phone Call from the Phone book	48
7.4	Remote Maintenance of Numbers and Names	49
7.5	Quick dial keys.....	52

8	Reminder	54
8.1	Setting the Alarm clock	54
8.2	Switching the Alarm clock off	55
8.3	Birthday reminder	56
8.4	Appointments.....	58
8.5	Calendar	61
9	Call info.....	64
9.1	Missed calls.....	64
9.2	Dialled numbers.....	65
9.3	Received calls.....	65
9.4	Call duration.....	65
9.5	Delete.....	65
10	Tools.....	66
10.1	emporiaME.....	67
10.2	Games	69
10.3	Weather.....	70
10.4	Orientation.....	72
10.5	Calculator	73
10.6	Magnifier.....	74
10.7	Emergency button	74
10.8	Position	75
10.9	Bluetooth	76

11	Settings.....	78
11.1	Silent/Sleep mode.....	79
11.2	Sound & alert.....	79
11.3	Display & light.....	80
11.4	Language.....	81
11.5	Time & date.....	81
11.6	Favourite key.....	81
11.7	Camera settings.....	82
11.8	Call waiting.....	82
11.9	Call forward.....	82
11.10	Auto Pickup.....	82
11.11	Withhold number.....	83
11.12	Help Text.....	83
11.13	Mailbox number (Answering Machine).....	84
11.14	Security.....	85
11.15	Master reset.....	85
12	Emergency Call Feature.....	86
12.1	Switching On the Emergency button.....	86
12.2	Storing Emergency numbers.....	87
12.3	Starting the Emergency Call Function.....	89
12.4	Additional Information about the Emergency Call Function.....	90

13	Safety Hints	91
14	Disposal	93
15	Warranty.....	94
16	Technical Product Data	94
17	EU Declaration of Conformity (DOC)	95

Congratulations on purchasing your emporia telephone!



This telephone has been developed in accordance with the standards of simplicity and is especially easy to handle.

To help you become familiar with your new telephone quickly, we have put together the important information for you in this handy guidebook.

You'll find out all about making telephoning simple at ***www.emporia.eu***

I hope you enjoy using your telephone and remain



Yours faithfully,


Eveline Pupeter
CEO emporia Telecom

Delivery Contents

- Included in the standard delivery are the telephone, a charging cable, a charging device, a battery, and this guidebook (instruction manual).
- Should any part be missing or defective, please contact the emporia Hotline on/at +43·732·77 77 17·0

Tips about this manual

- In this guidebook you'll find **helpful hints** and **tips** which are marked by this symbol .
- Some menu listings can be dialled directly using a **combination of numbers**. You'll find the most important combinations marked by the symbol **Nº** in the individual chapters.
- **Warnings** are marked by the symbol .

 *Depending on the software version or the network operator, some of the contents of this instruction manual may be different from your telephone.*

1 FOR YOUR SAFETY

Please read all of the safety guidelines in this guidebook carefully and follow them. Not following them may be dangerous or illegal.



Do not use this device while driving.



When using this device, keep it 15 mm from your body.



Keep the device 20 cm from a pacemaker and other medical devices.



When in a hospital or medical facilities, turn off the device when so instructed.



When on a plane or at an airport, turn off the device when so instructed.



Do not use the phone in an area where blasting is occurring.



Do not use the phone at a petrol/refuelling station.




Do not shine the torch directly into a person's or animal's eyes.

2 FIRST STEPS

2.1 Installing your SIM-card and battery

This is how to install your SIM-card

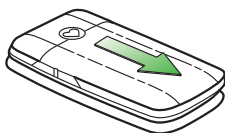


As shown in the drawing, slide off the back cover in the direction of the arrow.




The SIM-card slot is located in the upper right-hand corner. Make sure its gold contact area is facing downwards and slide the SIM-card from left to right into the SIM-card slot.

This is how to install your battery

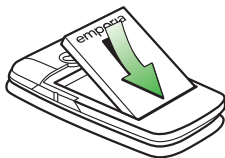


As the drawing shows, insert the battery by aligning the gold contacts in the phone and on the battery at the upper right.

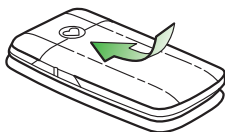

Slide the cover back in the direction of the heart symbol until it clicks into place.

2.2 Charging your battery

i Before using your phone for the first time, make sure the battery has been charged for at least four hours. Failure to do this can result in a shorter battery lifetime.

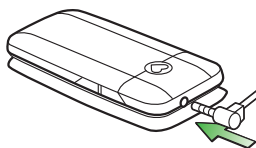

Insert the charger cord into the jack at the top of the phone and then insert the plug of the charger cord into an electrical outlet.

While charging



On the front of your closed phone you'll see a blinking red symbol of a battery, and on the narrow screen on the front a battery symbol that is slowly filling up will appear for approximately 10 seconds.

i At the beginning and end of charging a short melody plays. On the inside screen a battery symbol that is slowly filling up appears. When the level is low, the symbol is red; at mid-level it is yellow, at high green.

Charging completed

A red battery symbol appears on the front of your closed phone and a full battery symbol appears on the inside screen. When your phone is fully charged, a melody sounds and you can disconnect the charger cord.

2.3 Turning on your phone; First use

1. Open up your phone.
2. Press the  Key for at least two seconds.
3. You will feel the vibration signal, and for about 15 seconds you'll see the red emporia O on the screen.
4. Enter your 4-digit PIN-code and confirm it by pressing the  Key.
You can note down your PIN-code here:
5. On the screen you'll see **emporia**.

Your telephone welcomes you!

The first time you use your mobile phone you'll have to answer some questions. The phone needs this information for the navigation function and subsequent linkage to emporiaME.




You can also adjust the settings later under the menu option




Settings, but we recommend you do this now.


Language

1. **English** is back-lit in white.
Press the  Key to confirm it.
2. On the screen you'll see **Language "English" selected!**
The melody confirming this will play.



Time

1. Enter the current time by means of the key pad.
Press the  Key to confirm it.
2. On the screen you'll see **Time set!**
The melody confirming this will play.





Date

1. Enter today's date by means of the key pad.
Press the  Key to confirm it.
2. On the screen you'll see **Date set!**
The melody confirming this will play.

Name

1. Enter your first name by means of the key pad.
2. Store it by pressing the Key .
3. Enter your surname using the key pad.
4. Store it by pressing the Key .
5. On the screen you'll see ***Your name has been saved.***
The melody confirming this will play.

At home

1. **Country** – Enter your country using the key pad.
Press the  Key to confirm it.
2. **ZIP** – Enter the postal code of your town or city using the key pad. Press the .
3. **City** – Enter your town or city by means of the key pad.
Press the .
4. **Street & Number** – Enter your address by means of the key pad. Press the .
5. On the screen you'll see ***Your home is defined now!***
The melody confirming this will play.

emporiaME

(see page 67)





To switch off your telephone, press the  Key again.

2.4 Information for Beginners


The Menu

The menu is a list that lets you use your phone's functions and adjust the phone step by step to your specific needs.



By pressing the Keys  and  at the bottom of the screen you can make a selection in the menu or go back a step.


In addition the keys have these functions:

Key


With the  Key you can do the following:

1. End a call.
2. Go back a step in the menu.
3. Delete a letter when entering a text.

 *Should the phone not take you back to your desired menu option when you press the  Key, simply close and open the phone. The telephone will be back in standby mode and you can start again at the beginning.*

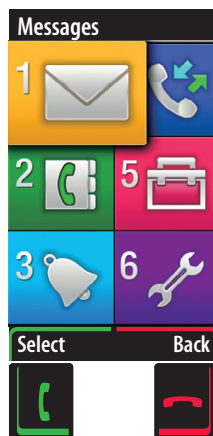



Key

With the Key  you can do the following:



1. Make a call.
2. Take/Receive a call.
3. Confirm your selection in the menu.
4. Go to the Call List in standby mode.

On the screen you'll see the heading **Call info**.

Selecting a menu option

With the  and  Keys you can make a selection, which is backlit in white.

You can also go to a menu option by using the number navigation. Press the number on the key pad that is next to the desired function on the screen.

(Example: You are in the menu. Press the number  for  and you will go directly to the Phone book.)


Energy-saving Mode / Standby Mode

If you've opened up your phone and don't press a key for a longer time, the screen will go black. This means that your phone is in its **energy-saving mode** to save electricity.

By pressing any key, you can turn the screen on again. Your phone is ready for you to use again – it's in the **standby mode**.

PIN-Code (Personal Identification Number)

The 4-digit combination of numbers should protect your telephone against abuse. It's your secret number so that no stranger can switch on your phone.

 *When switching on your phone, you are required to enter your 4-digit PIN-code. You'll find your PIN-code in the information you got from your network operator.*

SIM-Card

The SIM-card is a chip card that you insert into your telephone. Only then can you make a call with your mobile telephone. (SIM stands for **S**ubscriber **I**dentify **M**odule.)

2.5 Screen Symbols in Standby Mode



When your phone is in standby mode, the symbols on the screen mean as follows:




- : Shows the battery level. 4 bars: Battery full
- : Shows the reception quality. 4 bars: Optimal
- : Shows the GPS is working.
- : Shows the alarm is switched on.
- : Shows the profile **Silent/Sleep mode** is on.
- : Shows the profile **Meeting/Theatre mode** is on.
- : Shows the profile **Maximum/Bus mode** is on.
- : Shows a message has been received.
- : Shows a call has been missed.
- : Shows that Bluetooth is switched on.
- : Shows that a Bluetooth device is paired.
- : Shows that incoming calls have been diverted.
- : Shows that data are just being transferred.

3 PHONE SETTINGS

3.1 Switching on your phone


1. Open up your phone.
2. Press the  Key for at least two seconds.
3. You'll feel the vibration signal. On the screen you'll see the red emporia O for about 15 seconds.
4. Enter your 4-digit PIN-code.
Confirm it by pressing the  Key.
5. The letters **emporia** appear one after the other on the screen.

3.2 Switching off your phone


1. Press the  Key for at least two seconds.
2. The letters **emporia** disappear one after the other on the screen.
3. Your phone is off.
Last step: Close the phone.


4 CALLING

4.1 Making a call


1. Enter the number including the area code by means of the key pad.
2. Press the  Key to establish a connection.
3. On the screen you'll see Calling, the connection is being made.
4. Make your call.

4.2 Ending a call

1. Press the  Key to end a call.
2. On the screen you'll see **Call ended** and below it the length of time, for example **00:00**.
3. Or close your phone.





 *If the person you are talking with hangs up first, you needn't press any key.*


4.3 Answering a call


1. Your phone rings.
2. Press the  Key.
3. Talk on the phone.

4.4 Redialling from your Call List

It's very easy to call a person again whom you've already called.

1. Press the  Key.
2. On the screen you'll see the people you've called recently.
3. Go to the name of the person you want to call by using the  or the  Key. Confirm your selection with the  Key.
4. The screen will say **Call**.
5. Make your call.

 *People you have stored in your phone book appear on the screen by name. Only the others' phone numbers appear.*

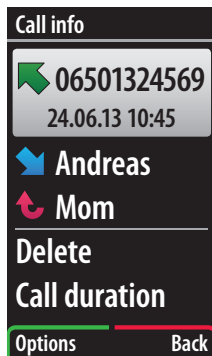

Display Symbols in the Call List

In the Call List the symbols on the screen mean the following:



Information about the dialled numbers.




Information about answered calls.






Information about missed calls.

4.5 Putting the ring-tone on mute for an incoming call

1. Your phone rings.
2. You don't want to take the call and the ring-tone is unpleasant.
3. Press the  Key on the side of your phone.
4. The ring-tone is immediately silent.



4.6 Hands-free Talking



1. While talking, press the  Key.
2. **Speaker** is back-lit in white.
3. Confirm by pressing the  Key.
4. The screen will say **Speaker on**.
5. To end the hands-free mode, press the  Key again.
The telephone switches over to the handset mode.

5 MESSAGES

You can write and send text messages with your phone. In this section you'll find out step-by-step how to do this.


You get to the menu option **Messages** in the following way:

1. Press the  Key.
2.  is highlighted. To confirm, press the  Key under **Select**.


No You get to this menu by pressing the  Key and then the  Key.

Available Menu Options:

New, Received, Sent, Unsent, Templates, Delete messages, Send contact by SMS, SMS in PhoneBk, Message settings

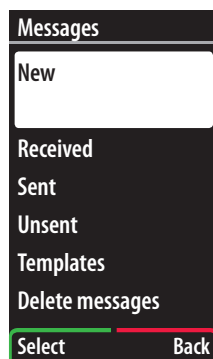

5.1 Writing Text Messages (SMS)

1. In the menu **Messages** select **New**. To confirm, press the  Key.
2. The screen will show a black field with the heading **Abc** and **160/1** on the right side.
3. Now you can write your text message (SMS).

5.2 Entering Texts

Using the key pad on your phone, you can enter letters, numbers and symbols. All letters, numbers from 0 to 9 as well as symbols (e.g. „?", „€“) are stored on the keys. By pressing the keys a few times, you can access the desired characters.

Letters on the individual keys

0 *Space* (space between words) or *0*

1 *1 . , ! ? ' " @ :*

2 *a b c 2 ä à â ã æ ç á é*

3 *d e f 3 đ é ē € è ê ë*

4 *g h i 4 î ï ï ï ğ ï ï*

5 *j k l 5 £*

6 *m n o 6 ö ñ ô œ ó ò*

7 *p q r s 7 ß \$ §*

8 *t u v 8 ü ù û ú*


9 *w x y z 9 ŵ ý ŷ*

***₊** . , @ ? - ' ! _ / \ & : ; + * = " € £ \$ ¥ % () < >
[] { } ^ ~ | ¡ # ¡ :) :- (Ω § ¤

#_{aA1} **Abc ABC abc 123**. Change from capitalized and lower case letters and numbers.



Entering Special Characters

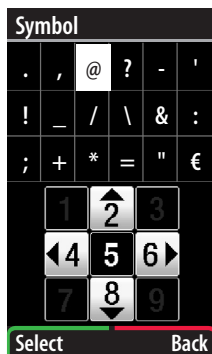


1. Press the ***₊** Key.
2. The screen will show the Special Symbols with the heading **Symbol**.
3. To select the special symbols you can move the **2_{abc}** Key up
move the **4_{ghi}** Key to the left
move the **6_{mno}** Key to the right
move the **8_{tuv}** Key down.
4. When you've selected the desired special symbol (back-lit in white), press the **[]** Key to confirm.
5. The special symbol has now been inserted into the text.





Moving around in the Text

The blinking white line „|“ is called the “cursor”. It shows the current position on the screen where you can enter text.

Using the  or the  Key, you can move the position of the cursor in the text without changing any of the characters.

 *When pressing the  or the  Key approximately two seconds, you can jump up or down in the text one line.*

Deleting Typing Errors

1. To delete individual characters to the left of the cursor, briefly press the  Key.
2. To delete the whole text, press the  Key for approximately three seconds.


Entering Texts: an Example


To write the word **EMPORIA**, do the following:

Press the  Key twice. The **E** appears on the screen.


Press the  Key once. The **M** appears.

Press the  Key once. The **P** appears.

Press the  Key three times. The **O** appears.

Press the  Key three times. The **R** appears.




Press the  Key three times. The **I** appears.

Press the  Key once. The **A** appears








5.3 Sending Messages


You've written a text message (SMS) and want to send it. You have two options:



Sending Messages by entering a phone number



1. Under **Options** press the  Key.
2. **Send** is back-lit in white.
To confirm, press the  Key.
3. The screen will say
Enter no. **or search no.**
4. Enter the number.
To confirm, press the  Key.
5. The screen will show **Sent**.
6. The task is completed.

Sending Messages with a Number from your Phone Book

1. Under **Options** press the  Key.
2. **Send** is back-lit in white.
To confirm, press the  Key.
3. The screen will say
Enter no. or search no.
4. Under **Search** press the  Key.
5. You're now in the **Phone book**.
The first entry in the phone book is back-lit white.
6. Using the  or the  Key, go to the desired entry.
Under **Select** confirm your choice with the  Key.
7. The screen will show the number.
To confirm, press the  Key under **Send**.
8. The screen will say **Sent**.
9. The task is completed.


 *If it takes longer to send the message, you'll see **Sending ...** on your screen.*

 *You can store a message or send it at a later time.
To do this, press  **Options** and select **Save as unsent**.*

 *You can store a message and use it as a template for future messages. To do this, press  **Options** and select **Save as template**.*

5.4 Receiving and Reading Messages













A message tone lets you know that you have received a new message. On the front of your closed telephone you will see a blinking white symbol of a letter, and the screen will say **1 New message!**


1. Press the  Key.
2. The screen will show the sender (name or number), date, time, and the contents of the message (SMS).
3. The task is completed.

5.5 Messages with Pictures (MMS)

With your phone you can send pictures that you have taken as a multi-media message (MMS). In this section we will find out how to do this step by step.

Creating Multi-media Messages (MMS)

1. In the menu **Messages** select **New**.
To confirm, press the  Key.
2. The screen will show a black field with the heading **Abc** and **160/1** on the right side.
3. Under **Options** press the  Key.
4. With the  or the  Key go to **Insert picture**.
To confirm, press the  Key.
5. The screen will show the heading **Insert picture**.
Select this using the  or  Key.
From photo album is back-lit in white.
To confirm, press the  Key.
6. **All my photos** is back-lit in white.
To confirm, press the  Key under **Select**.
7. Select the photo using the  or  Key.
To confirm, press the  Key.

8. The photo has been inserted into the text field.
You can add a written message.
Under **Options** press the  Key.
9. Send the message.
(see page 33)

5.6 Unsent Messages

Messages that you did not want to send immediately and have stored you can find under **Unsent**.

No You can easily access **Unsent** by pressing  and then the number combination  .

5.7 Inserting Templates




Some **Templates** are already stored in your phone.
You can add them to your text messages and adapt them.

No You can easily access **Templates** by pressing  and then the number combination  .

6 CAMERA

You can also take photos with your telephone. In this section you will find out step by step how to do this.


6.1 Taking Photos










1. Press the  Key at the side of your phone.
 2. Point your screen at the object or person you would like to take a picture of.
 3. To take the photo, press the  or  Key. You will hear the sound of the shutter.
 4. The photo is automatically stored.
 5. The task is completed.
- Last step: Close your phone.




6.2 Camera Options




You can set a few things in your camera. To do this, press the




 Key under **Options** and select the desired settings:

- **Auto timer** – Select the delayed-shutter release for self-portraits.
Select the  or  Key for **10, 20** or **30 seconds**.
To confirm, press the  Key.
- **Effect** – Select special effects for future photos.
Select among **Normal, Black & White, Negative** or **Sepia** by pressing the  or  Key.
To confirm, press the  Key.
- **Brightness** – Makes it possible to adjust the brightness of the photo: **Dark, Normal** or **Light**.
- **Size** – Determines the size or the exact details of future photos.
Choose among **2.0 MP, 1.2 MP, XVGA** (1.0 MP), **VGA** (0.3 MP) or **MMS** by pressing the  or  Key.
To confirm press the  Key.




 *For photos you want to store in the telephone book, select **XVGA**. For photos you want to print, select **2.0 MP**.*

- **Quality** – Select the quality and/or the details of future photos.






Select among **High**, **Medium** or **Low** using the  or  Key.
To confirm, press the  Key.

- **Night Mode** – Optimally sets the camera for night photos.
Select between **On** and **Off** by pressing the  or  Key.
To confirm, press the  Key.

6.3 Viewing Photos

1. Press the  Key.
2. Go to **All my photos** by pressing the  or  Key.


You will see all the photos you have taken with your mobile phone.
The last photo you took is first.
All of the photos are numbered.

3. Choose a photo by pressing the  or  Key.
Press the key  **Select**.
4. The photo will appear on the screen.
5. To view other photos, press the  or  Key.



6.4 Making Use of Your Photos

You can use a stored photo in the following way:

To do this, choose the desired options under **Options** by pressing the  Key:

- **Send** – You can send the photo directly as a multi-media message. (see page 36)
- **Delete** – You can delete the photo
- **Add to favourites** – You can mark the photo as your favourite. In the future you will simply find it under Favourites.
- **Use as wallpaper** – Determines the photo you will see when you turn on your phone.
- **Mark for printing** – Mark the photo to be printed at a later time.
- **Contact's picture** – Add a photo to a contact in your telephone book. When you talk on the phone with this person, the photo will appear on the screen.



Picture sharing.

Share the special moments with **emporiaME**.

Receive pictures from children and grandchildren.
Make a call and view the pictures together.



Video












7 PHONE BOOK

In the telephone book you can store up to 500 entries. This means when you have entered the names and numbers of your contacts (family, friends, doctor, etc.) in your telephone, you will always have your personal telephone book with you.



You get to the menu option **Phone book** in the following way:

1. Press the  Key.
2. Select the **Phone book**  with the  or  Key.
To confirm, press the  Key.






No You can access this menu by pressing the  Key and then the  Key.

Available Menu Options:






Search name, Add contact, Edit contact, Delete contact, Send contact by SMS, Copy contact, Own number, Quick dial keys, Emergency numbers, Settings, SMS in PhoneBk

7.1 Storing Numbers and Names









No You can easily access the **Phone book** by pressing the  Key and then the number combination  .

1. In the **Phone book** menu select **Add contact**.
To confirm press the  Key.
2. On the screen you will see **Enter name:** 
Enter the name using the key pad.
Save the name by pressing the  Key.
3. On the screen you will see **Enter number:** 
Enter the number including the area code.
Save this by pressing the  Key.








Add Birthday Reminder:

4. On the screen you will see:
Do you want to add a birthday reminder for ... ?
Select **Yes** with the  Key or **No** with the  Key.
 - If you have selected **Yes**,
enter the birthday using the key pad.
 - Press the  Key for **Continue**.
 - On the screen you will see, e.g., **01.01.2000: You will get a reminder 3 days before and on the birthday.**
5. Press the  Key for **OK** or
press the  Key for **Edit** if you want to correct anything.

Add Contact Photo:





6. On the screen you will see:
Do you want to add a contact photo for ... ?
Select **Yes** with the  Key or **No** with the  Key.
 - If you want to add a photo:
By pressing the  or  Key go to ***Take new photo*** or ***From photo album*** and confirm this with the  Key.
 - If you want to take a new photo,
then select ***Take new photo***.
7. Then select the field **Save** by pressing the  Key.
To confirm press the  Key.
8. The screen will show:
 ***... has been saved to your Phone book.***
9. The task is completed.


7.2 Changing Numbers and Names

1. Select the menu option **Edit contact** in the Phone book.
To confirm, press the  Key.
2. Using the  or  Key go to the entry that you would like to modify.
To confirm, press the  Key.
3. Enter the desired changes.
4. Then select the field **Save** with the  Key.
To confirm, press the  Key.
5. The screen will show:
 **... has been saved to your Phone book.**
6. The task is completed.

7.3 Making a Phone Call from the Phone book


You can easily call all the numbers stored in the Phone book.

7. Press the  Key (Phone book Key) and you will be right in the **Phone book**.
8. Select the desired entry by pressing the  or  Key. To confirm, press the  Key.
9. The screen will show: **Call ...**
10. Make the call.

 *You can find the entries quickly in the Phone book by entering the first letters of the person's name. If there is no entry with these letters, then the screen will show **List empty**.*

7.4 Remote Maintenance of Numbers and Names



You can send Phone book entries by text message (SMS) from another mobile phone (e.g., from relatives, friends) to your own phone.

1. The person has to send a text message (SMS) in the following format to you: **#name#number#**
(e.g. **#Fritz#01509876543#**)
2. You will receive a message. The screen will say:
New PhoneBk entry from ...
To confirm, press the  Key
3. The number and the name are automatically stored in your Phone book.
4. The task is completed.

Maintain phone book.

Remote maintain the phone book with emporiaME.



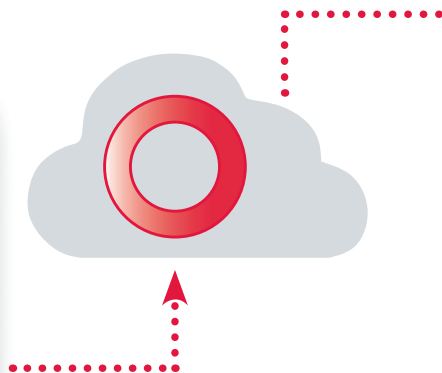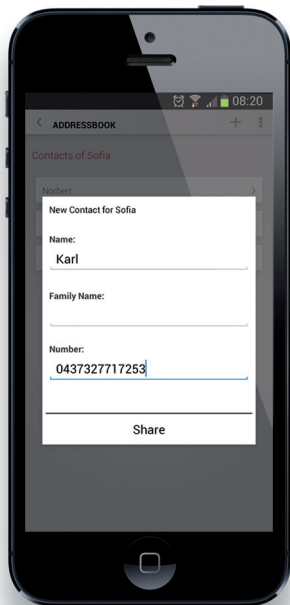



Create and update phone book entries.













7.5 Quick dial keys

You can store five numbers that you frequently need on your Quick dial keys. In this section you will find out step by step how to do this.






1. Press the Key **2**_{abc} or **3**_{def} or **4**_{ghi} or **5**_{jkl} or **6**_{mno} for at least three seconds.
2. On the screen you will see:
Would you like to assign a contact to that number?
Confirm **Yes** with the  Key.
3. The screen will show:
Enter name: ***or search number***
 - Enter a name using the key pad or
 - Press the  Key for ***Search.***
Select the desired Phone book entry with the  or  Key.
4. Confirm with the  Key.
5. The screen will show:  ***Saved.***
The task is completed.

 *Phone book entries that already exist can also be stored as speed dial numbers. Speed dial numbers are marked with a .*

Change or Delete a Quick dial key

1. In the Phone book select the menu option **Quick dial keys**.
To confirm, press the  Key.
2. On the screen a list with all the Quick dial keys and their current assignment will appear.
Select the desired entry with the  or  Key.
To confirm, press the Key  **Select**.
3. Select **Change** or **Delete** with the  or  Key and proceed as described above.






Calling Using Quick dial keys



1. Press the Key  or  or  or  or .
2. On the screen you will see: **Calling ...**
The call is being connected.
3. Make the call.

8 REMINDER

You can use your telephone as an alarm clock or memory aid for appointments. Your telephone will send you a message about the upcoming appointment in time.

You get to the menu option **Reminder** in the following way:

1. Press the  Key.
2. Select **Reminder**  with the  or  Key. To confirm, press the  Key.





No You can access this menu by pressing the  Key and then the  Key.

Available Menu Options:

Alarm clock, Birthday reminder, Events, Calendar



8.1 Setting the Alarm clock




1. Select **Alarm clock** in the menu **Reminder**. Confirm with the  Key.
2. Select **Set time** with the  or  Key. To confirm, press the  Key.
3. On the screen you will see: **Set alarm time:**
4. Enter the desired wake-up time by

pressing the  or  Key. Then press the  Key.

5. The screen will say:





Time until your alarm: ... hours ... minutes

6. The task is completed.

 *When the alarm rings, press the  Key to switch the alarm off. If you want it to ring again in ten minutes, then press the  Key.*

No *You can easily access the alarm clock by pressing the  Key and then the number combination   .*










8.2 Switching the Alarm clock off















1. Select **Alarm clock** in the menu **Reminder**.
Confirm with the  Key.
2. Select **Off** with the  or  Key.
Confirm this with the  Key.
3. The screen will say: **Deactivated**
4. The task is completed.

No *You can easily access the alarm clock by pressing the  Key and then the number combination   .*

8.3 Birthday reminder







You can assign a birthday reminder to every contact in your Phone book. The Phone book will remind you about the birthday in time.




1. Select ***Birthday reminder*** in the menu ***Reminder***.
Confirm by pressing the  Key.
2. ***New birthday*** will appear back-lit in white.
Press ***Select*** with the  Key.
3. On the screen you will see:
Enter Name: ***or search name***
Enter the name using the key pad or
press the  Key to search for it in the Phone book.
4. Press  Key to ***Save***.
5. The screen will show the heading: ***Set birth date***
6. Enter the date and the time by pressing the  or  Key.
To confirm, press the  Key.
7. The screen will show, e.g.,  ***Saved***.
Reminder: 3 days before and on the birthday.
To confirm, press the  Key.

8. If you want to be reminded at a different time, press the Key  **Edit**.
The screen will show the heading: **Edit reminder**
- The screen will say: **Days before** back-lit in white.
Press the Key  **Change**.
 - Change the days with the  or  Key.
To confirm, press the Key .
 - Select **Alarm** with the  or  Key.
Press the Key  **Change**.
 - Set the desired time with the  or  Key.
To confirm, press the  Key.
 - If you no longer want to be reminded on the birthday, select **Repeat at birthday** by pressing the  or  Key.
Press the Key  **Change**. You will no longer be reminded on the actual birthday.
9. The task is completed.

8.4 Appointments

You can enter appointments in your telephone and set reminders and additional reminders for these events.

1. Select **Events** in the Menu **Reminder**.
To confirm, press the  Key.
2. The screen will say **New event** back-lit in white.
Press the  Key **Select**.
3. The screen will say: **Enter subject:**
4. Enter the name of an appointment by using the key pad.
Save it with the  Key.
5. The screen will say: **Set start date**
6. Enter day, month, and year by using the  or  Key.
Continue by using the  Key.







No You can easily access this feature by pressing  and then the number combination  .

Setting the Length of an event:

7. The screen will show:

Do you want to add the duration?

Select **Yes** with  or **No** with .

- If **Yes**, the screen will say **Set end date**
 - Press the  or  Key to enter the end date.
Continue by using the  Key.
- The screen will say **Set end time**
 - Enter the time with the  or  Key.
Continue by using the  Key.



Setting a Reminder of an event

8. The screen will show:

New event. Do you want to add a reminder?

If you would like a reminder, confirm with the  Key.

9. The screen will say **Set reminder date**

Enter the date with the  or  Key.

Continue by using the  Key.

10. The screen will say **Set reminder time**

Enter the time with the  or  Key.

Continue by using the  Key.

Setting a repeating event:

11. The screen will say:

New event. Do you want to repeat the event ... ?



If you want to repeat the event, press the  Key.


12. The screen will say ***Options: Choose days, Once a day, Weekly, Monthly, or Once a year***

Select the desired by pressing the  or  Key.

Continue by pressing the  Key.

13. You want an appointment reminder on different days.


Enter the desired days by pressing the  or  Key.

Select ***Save*** with the  Key.




Continue by pressing the  Key.











14. The screen will say:  ***Entry saved***

15. The task is completed.

 *Events can be **Edit** (modify) and **Deleted** (Remove event) at a later time.*

8.5 Calendar

No You can easily access this feature by pressing  and then the number combination  .

1. Select **Calendar** in the menu **Reminder**.
Confirm with the  Key.
2. The screen will show the current month.
3. Select a certain day by pressing the  or  Key.
Press the  Key **Options**.
4. Select **New entry** with the  or  Key.
To confirm, press the  Key.
5. By pressing the  or  Key select between:
 - **New event** (see page 58)
 - **New birthday** (see page 56)and confirm your choice with the  Key.

May 2013						
Mo	29	6	13	20	27	3
Di	30	7	14	21	28	4
Mi	1	8	15	22	29	5
Do	2	9	16	23	30	6
Fr	3	10	17	24	31	7
Sa	4	11	18	25	1	8
So	5	12	19	26	2	9
Options				Back		



Enter appointments.

Organize your calendar with emporiaME.

Save and send birthdays, meetings and doctor's appointments with emporiaME.



Video








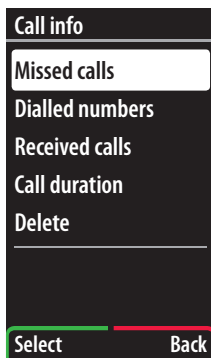




9 CALL INFO

Here you find an overview of all the telephone connections.

You get to the menu option **Call info** in the following way:

1. Press the  Key.
2. Select **Call info**  with the  or  Key.
To confirm, press the  Key.






No You can access this menu by pressing the  Key and then the  Key.

Available Menu Options::




Missed calls, Dialed numbers, Received calls, Call duration, Delete

9.1 Missed calls

Here you find all the calls that you did not answer. If you have missed a call, it is shown on the standby screen with .

1. Select **Missed calls** in the menu **Call info**.
Confirm with the  Key.
2. The last 20 missed calls are shown.
Confirm the list and  on the screen disappears.

3. The task is completed.

No *You can easily access this feature by pressing  and then the number combination  .*

9.2 Dialed numbers

Here you find the last numbers you dialled.

9.3 Received calls

Here you find the last numbers you answered.

9.4 Call duration

For a better overview of your telephone conversations you find here a list of the calls you last made and their length.






9.5 Delete



Deletes All Call Lists (all, missed, dialled and answered).

10 TOOLS

Here you find a number of useful helpers and some diversions.

You get to the menu option *Tools* in the following way:

1. Press the  Key.
2. Select ***Tools***  with the  or  Key.
To confirm, press the  Key.


No You can access this menu by pressing the  Key and then the  Key.

Available Menu Options:









emporiaME, Games, Weather, Orientation, Calculator, Magnifier, Emergency button, Position, Bluetooth



10.1 emporiaME

 *emporiaMe is a bridge between generations. It makes interaction between Smartphone-Apps and emporia mobile phones possible, e.g., mutually shared photo albums, shared calendars or the remote maintenance options. This way, the digital possibilities are reduced to the most important thing: simple communication with your loved ones.*


Here you find out how to access emporiaMe:

1. Select **emporiaMe** in the menu **Tools**.
To confirm, press the  Key.
2. **New account** is back-lit in white.
To confirm, press the  Key.
3. On the screen you will see:
Do you want to activate emporiaME service now?
Confirm **Yes** with the  Key.
4. Please accept the licensing contracts by pressing the  Key.
5. On the screen you will see:
Enter telephone number
Enter your telephone number.
To confirm, press the  Key.
6. Your account is set up now.
7. Select **Friends** by pressing the  or  Key.
To confirm, press the  Key.

8. Select **New friend** by pressing the  or  Key.

To confirm, press the  Key.


The phone book is displayed.


9. Select a contact with the  or  Key.

To confirm, press the  Key.

Your phone will send a »Friend Me« request to your friend's smartphone. They have to confirm the contact. As soon as they have done this, you will receive a confirmation on your emporia mobile phone.








You can now decide what degree of access this friend should have. Confirm if they can remotely maintain your Phone book and calendar.




 *emporiaMe only works with friends who use a smartphone and have already installed the emporiaME App.*

 *The license agreement can be found at:
www.emporia.eu/termsandconditions/emporiaME*

10.2 Games

This telephone offers you 3 games to train your memory. They train your powers of concentration, your ability to react, and your visual orientation.

1. Select **Games** in the menu **Tools**.
To confirm, press the  Key.
2. Select a game with the  or  Key.
To confirm, press the  Key.
3. The game opens up.
 - Press the  Key **Help**.
The screen will show a short description of the game.
 - Press the  Key **Back**.
You can continue/begin the game.
 - If you want to stop playing before the end of the game, press the  Key **Back** or close your telephone.

No You can easily access this feature by pressing  and then the number combination  .

Quadis

In this game you have to find the right end of the way that is shown as fast as possible. Quadis trains your visual orientation and ability to concentrate.

PickQuick




PickQuick requires an ability to react quickly. You have to react correctly to different stimuli. You only have a short time to think. This game trains your resilience.



Jappo


Jappo trains your powers of concentration and attentiveness. You have to quickly check if a certain symbol is present in a group of symbols.

10.3 Weather

Your telephone can show the current weather at your location and the forecast for the coming days.





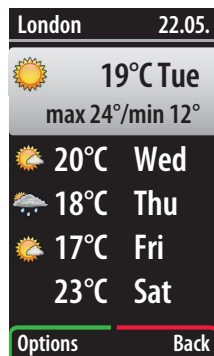


No You can easily access this feature by pressing  and then the number combination  .

1. Select **Weather** in the menu Tools.
To confirm, press the  Key.
2. The current weather as well as a four-day forecast will appear on your screen.
3. Press the  Key **Options**.
You can **Update current location, Change location,**






Add location, Remove location or Setting.


Show weather forecast on start-up screen

4. Choose **Settings** with the  or  Key.
To confirm, press the  Key.
5. Select **Show at start** by pressing the  or  Key.
To confirm, press the  Key.
You will see the current weather and
a weather forecast right on your start-up screen.
6. Press the  Key **Back** or
close your telephone to end the forecast.

10.4 Orientation

The telephone shows you the fastest way home or to interesting places.

1. Select **Orientation** in the menu **Tools**.
To confirm, press the  Key.
2. Select with the  or  Key among the following:
 - **My position** – Here you see the address of your current location. Below the address you will see the exact coordinates of where you are.
 - **Bring me home** – Here your mobile phone calculates the fastest way from your current position to your **Home** location. Your phone guides you there using arrows.
 - **Points of interest** – Here you can have the fastest way to pre-determined places like cafes, chemists', the police, or hospitals calculated. Select a location using the  or  Key and confirm it with the  Key. Your mobile phone calculates the fastest route there from your current position and guides you there using arrows.
 - **Home setup** – Here you can set the location for **Home**. When you are at home and want to set the location with the

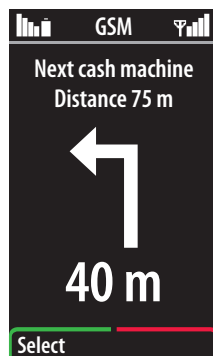




help of the GPS, select **Actual position**.

Or select **Enter address** to enter your address manually.

- **Settings** – Here you can choose between kilometres and miles and set the maximum distance within which you want to find interesting locations.



10.5 Calculator



This menu option helps you to do simple calculations.

No You can easily access this feature by pressing  and then the number combination  .

10.6 Magnifier

You can use the camera in the telephone as a magnifying glass.

1. Select **Magnifier** in the menu **Tools**.
To confirm, press the  Key.
2. Now the magnifying glass is working.
Hold the camera about 5 cm above the object that you want to see magnified.
3. Press the  Key for **Back** or close the telephone to end magnifying.








No You can easily access this feature by pressing  and then the number combination  .

10.7 Emergency button

- Emergency button **OFF**: No emergency number will be dialled in case the key is pressed.
- Emergency button **ON** and no emergency number is stored: When the key is pressed, the emergency number 112 will automatically be dialled. Using the **Settings** in your **Phone book**, you can store up to 5 emergency numbers.
(see page 87)

10.8 Position

Here you can determine your current location. This is necessary for the navigation feature, the weather, and in an emergency.









1. Select **Position** in the menu **Tools**.
To confirm, press the  Key.
2. Select with the  or  Key **Position On/Off**.
To confirm, press the  Key.
3. Select with the  or  Key **On** or **Off**.
4. On the screen you will see  **Done**.








You can get further information about determining your location on our website: www.emporia.eu

10.9 Bluetooth






Bluetooth is a wireless connection between electronic devices. You can connect your telephone with, e.g. the hands-free system on your car or a Bluetooth headset.

1. Select **Bluetooth** in the menu **Tools**.
To confirm, press the  Key.
2. Select **Bluetooth On/Off** using the  or  Key.
Press the  Key for **Select**.
3. Select **On** or **Off** with the  or  Key.
To confirm, press the  Key.
4. On the screen you will see:
 **Bluetooth is now switched on**

Connecting Bluetooth:

1. Select **Bluetooth** in the menu **Tools**.
To confirm, press the  Key.
2. Select **Connect** with the  or  Key.
Press the  Key for **Select**.
3. Select **Search for new devices** with the  Key.
Your phone looks for devices to connect with in the surroundings.






Managing Devices



1. Select **Bluetooth** in the menu **Tools**.
To confirm, press the  Key.
2. Select **Manage devices** with the  or  Key.
Press the  Key for **Select**.
3. Choose among **Visibility**, **Device name**,
and **Use default PIN**.
Press the  Key for **Select**.
 - **Visibility** (Pre-setting: On)
You can hide your phone from other Bluetooth devices.
 - **Device name** (Pre-setting: EMPORIA)
Here you determine the name with which other Bluetooth devices can find your telephone.
 - **Use default PIN** (Pre-setting: On)
When a new Bluetooth device is connected,
the PINs 0000 and 1234 automatically used.
In case the PINs are incorrect, you have to enter
them manually.

11 SETTINGS

Here you can set up your telephone according to your personal preferences.


You get to the menu option **Settings** in the following way:

1. Press the  Key.
2. Select **Settings**  with the  or  Key.
To confirm, press the  Key.

No You can access this menu by pressing the  Key and then the  Key.

Available Menu Options:

Silent/Sleep mode, Sound & alert, Display & light, Language, Time & date, Favourite key, Camera settings, Call waiting, Call forward, Auto Pickup, Withhold number, Help Text, Network, Internet settings, Mailbox number, Security, Emergency numbers, Emergency button, Master reset

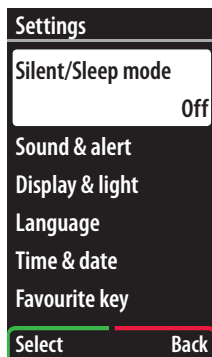

11.1 Silent/Sleep mode

Activate this feature when you do not want to switch off your phone, but it should not ring, e.g., at the doctor's surgery or in church. The calls will be shown on the screen but the phone will not ring.

No You can easily access this feature by pressing  Key and then the number combination  .

11.2 Sound & alert


Here you can choose a ring tone melody and determine its volume, vibration signal, key tones, etc.

No You can easily access this feature by pressing  Key and then the number combination  .

11.3 Display & light

Here you can set how long the screen and the keypad are lit before the telephone goes into the energy saving mode.

Keypad light

 *If the keypad is lit longer, it requires more energy, reducing the operation time of your phone.*

Text size

Here you can adjust the size of the texts on the screen to your needs.

SMS Text size

Here you can determine the size of the letters for text messages.

11.4 Language


Here you can choose among different languages. Should you set the wrong language by mistake, you can reset it to English here.

No *You can easily access this feature by pressing  Key and then the number combination  .*

11.5 Time & date

Here you can set the time and date. This is where you have to, e.g., change the clock to daylight savings time.

11.6 Favourite key

Using the  Key you can store either your favourite telephone contact or the feature that you use the most. Here you can choose or change a feature for this.

11.7 Camera settings

Here you can set the camera just the way you want it, e.g., resolution or special effects. *(see page 39)*

11.8 Call waiting

Here you can set a signal that will notify you of an incoming call while you are already making a call.

11.9 Call forward

Here you can divert a call to your answering machine or to a certain person in your Phone book.

11.10 Auto Pickup




Here you can set the automatic call answering feature. An incoming call will be answered immediately when you open up your phone.

11.11 Withhold number

This feature allows you to decide if your own telephone number will be shown on the display of the phone of the person you are calling.

11.12 Help Text

For the individual menu option there is helpful information that explains the exact way each option works. Here you can switch these texts on and off and set the time after which the text will appear.

 *When some information appears on the screen, you can use the  Key in the text to scroll down or the  Key to close the text.*

11.13 Mailbox number (Answering Machine)

Here you can store the number of the answering machine. You will get this number from your provider.

1. Select **Mailbox number** in the menu **Settings**.

To confirm, press the  Key.

2. On the screen you will see:

Mailbox no.

Enter the number of your Mobilbox.


You will find the number in the paperwork that your provider gave you.

To confirm, press the  Key.

3. On the screen you will see:







Number saved. Listen to mailbox: Press button "1" 2 sec.

4. The task is completed.

No If you press  key in standby mode for at least three seconds, you will automatically be connected to your answering machine.

11.14 Security

Here you can change your PIN-Code or switch it off. If you switch off your PIN-Code, then your device will no longer be protected from someone else's using it.

5. Select **Security** in the menu **Settings**.
Confirm this by pressing the  Key.
6. **PIN** is back-lit in white. Confirm this by pressing the  Key.
Select among **PIN on**, **PIN off**, or **Change PIN**.
by pressing the  or  Key.
To confirm, press the  Key.
7. Enter your current PIN-Code. (see page 18)
To confirm, press the  Key.
8. On the screen you will see: **PIN OK! PIN Request ...**
9. The task is completed.













11.15 Master reset

This feature returns your phone to its factory settings.
To do this, you need the telephone code, which is 1234.

12 EMERGENCY CALL FEATURE

Your telephone has an emergency call function that calls help quickly if you need it. In this section you will find out step by step how it works. For your own safety please read through the whole chapter carefully.


12.1 Switching On the Emergency button

1. Press the  Key.
2. Select **Settings**  by pressing the  or  Key.
Confirm this by pressing the  Key.
3. Select **Emergency** button by pressing the  or  Key.
To confirm, press the  Key.
4. Go to **On** by pressing the  or  Key.
Confirm this by pressing the  Key.
5. On the screen you will see:
 **Emergency button Activated**
The task is completed.
Last step: Close your phone.















12.2 Storing Emergency numbers



It's possible to store five numbers as emergency numbers. You can store individuals' numbers and those of emergency rescue services.

If possible, individuals' numbers should be stored first and then those of the rescue services.


 *It is only possible to use numbers as emergency numbers that are already stored in your phone book. (see page 45)*


Storing Individuals' Numbers as Emergency Numbers

1. Press the  Key.
2. Select **Settings**  by pressing the  or  Key.
Confirm this by pressing the  Key.
3. Select **Emergency numbers** by pressing the  or  Key.
Confirm by pressing the  Key.
4. **Add Emerg. No.** is back-lit in white.
To confirm, press the  Key.
5. **EmNo. 1** is back-lit in white.
Confirm this by pressing the  Key.
6. Select your desired contact from your phone book by pressing the  or  Key.
Confirm this by pressing the  Key.
7. **Privat** is back-lit in white.
Confirm this by pressing the  Key.


8. The heading **Send Message** will appear.
Yes is back-lit in white.
Confirm by pressing the  Key.
9. On the screen you will see:  **Saved**
10. Go on storing more individuals' numbers as emergency numbers just as you did the first emergency number.
You can store a maximum of five emergency call numbers.
11. The task is completed.
Last step: Close your phone.



Storing Emergency Rescue Services as Emergency Numbers


 *If you want to store the number for the ambulance, police, fire brigade, or other public institution or rescue service as an emergency number, you first have to contact them. Be careful! You have to store the desired institution or service in your Phone book!*

 *We cannot accept any responsibility or liability in the event that you, for instance, call a rescue service by mistake.*


12.3 Starting the Emergency Call Function

1. Press the Emergency Call Button  on the back of your telephone for at least three seconds.
2. The emergency call cycle is started. A shrill, piercing warning tone sounds immediately to alert the people around you.

 *If you have pressed the emergency call button by mistake, immediately press the  Key for three seconds to cancel it.*


 *If no emergency number is stored or there's no credit left on your phone card, the European emergency call number 112 will be dialled. This means that your call will be forwarded directly to the next police station.*

3. The telephone automatically calls the emergency number that is stored first and also sends it a text message (SMS). The text message (SMS) notifies the person about the emergency call.


 *For an emergency call, your number will always be displayed, even if you selected **Withhold number** under **Settings**.*

4. For the emergency call the telephone automatically switches on the handsfree speech function at the highest volume.

5. As soon as the person you called receives the emergency call, they are asked to confirm by pressing three times **0**.

 *In the case of an emergency rescue service or institution, no confirmation is necessary.*

6. Should the first person not confirm, the emergency call numbers that are stored next in that order will be called.
7. Only when a person answers and confirms or a rescue service was called is the emergency call cycle stopped. The other emergency call numbers stored in your phone book will no longer be called.

 *The emergency call cycle includes up to three rounds of dialling of all the stored emergency call numbers.*

12.4 Additional Information about the Emergency Call Function

- If you are called within the first hour after the emergency call function has been activated, the telephone automatically accepts every incoming call.
- In order to end this automatic answer function, you have to switch off your telephone and then switch it on again. (see page 25).

13 SAFETY HINTS



Small phone parts can cause choking if swallowed.



This device can produce loud tones.



Do not dispose of by burning.



Avoid contact with magnetic fields.



Avoid exposing the device to extreme temperatures.



Avoid contact with liquids, keep the device dry.



Do not dismantle the device.



In an emergency do not only rely on this device.



Use approved accessories only.

Handling the Battery & Safety

Always switch off the device and disconnect the battery charger before you remove the battery. Only use the battery and the charger for your device that are supplied by the manufacturer or spare parts approved by the manufacturer. Using other batteries and chargers can be dangerous. Don't take the battery apart and don't cause a short circuit. If the battery poles touch a metal object by mistake, e.g., a key, a paper clip or a pen, a short circuit can result. The improper use of the battery can damage the device and be hazardous to your health due to fire, explosion, or chemical burns. If you think that the battery is damaged, stop using it and have it checked at your service center.

Handling the Product

You are solely responsible for the use of the device and for any consequences of its use. The device must be switched off wherever the use of a mobile telephone is prohibited. The use of the device is subject to safety measures that were developed for the protection of the user and their surroundings.

- Always use the device carefully and keep it in a clean and dust-free place.
- Don't expose the device to an open flame or burning tobacco products.
- Don't expose the device to liquids or dampness.
- Don't drop the device, throw it, or try to bend it.
- Don't use aggressive chemicals, detergents, or aerosols to clean the device.
- Don't paint the device.
- Don't dismantle the device. Only let authorized personnel take it apart.
- Don't expose your device to extreme temperatures below 0° and above 40° Centigrade.
- Follow your local regulations concerning the disposal of electronic devices.
- Don't carry the device in the back pocket of your trousers, because it can break when you sit down.

Electricity Supply

Only put the battery into the device and start using the device when the instruction manual says to do so. The power plug is only suitable for use in conventional electrical outlets of the public mains supplying 230 voltage / 50 Hz (10/16A).

14 DISPOSAL

- **Disposing of the packaging**

The box and other packaging materials are recyclable and should, in principle, be brought to a recycling centre.



- **Disposing of the battery**

Batteries do not belong in with household rubbish!

As a consumer you have a legal obligation to return used batteries. You can give them back at your local collection centre or retail store.



- **Disposing of the device**

When the day comes that your device is worn out, please don't throw it in with your household rubbish. For the sake of the environment, take it to a materials recycling centre, where old devices can be left and sent off to be used in an environmentally compatible way.



15 WARRANTY

The 24-month warranty (6 months for the battery) begins with the sale of the device to the user. Be sure to keep the **original sales receipt** (cash register slip, invoice) with the **IMEI-number** to prove the date of sale. Our warranty is determined by the conditions of warranty that were valid at the time of purchase. To the greatest possible extent that is legally valid, emporia is in no way to be held responsible for the following situations:

- Any loss of data or income.
- Any special or incidental damage as well as indirect or consequential damage, regardless of the cause.

16 TECHNICAL PRODUCT DATA

- Loudspeakers are suitable for the hearing impaired
- Dual band GSM 900 / 1800 MHz
- Measurements: 108 x 53 x 20 mm
- Weight: 110 gr
- Screen size: 2.8" FSTN
- Screen resolution: 240 x 400 pixels
- Operating temperature: 0 - 40° C
- Battery: AK-V88 – Li-Ion 3.7 V / 1150 mAh
- Standby time: up to 170 hours
- Talk time: up to 6 hours
- Internal antenna: SAR 1.6 W/kg
- Power supply: RL-V170EU (In: 100 - 240 V, AC 50/60 Hz | Out: 5,0 V - 550 mA DC)
- 2 MP Digital camera
- Bluetooth 2.1 HFP, HSP
- Torch: protection class 3

17 EU DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom Produktions- und Vertriebs-GmbH & Co. KG,
hereby declare that the design of the device referred to below complies
with the pertinent EU-Directives.

Name of Product: GSM 3G/2G Dual Band Mobile Phone

Product Number: V88

Pertinent EU-Directives: Radio Equipment 1999/5/EG R&TTE Directive 1999/5/EC

Harmonised EN Standards, specific and basic standards:

- **Safety and Health:** EN 60950-1:2006+A12:2011; EN 50360:2001;
EN 62209-1-2006; EN 62209-2-2010; EN 62479:2010
- **EMC:** EN 301 489-1 V1.9.2; EN 301 489-3 V1.4.1; EN 301 489-7 V1.3.1;
EN 301 489-17 V2.1.1; EN 301 489-24 V1.5.1
- **Radio spectrum:** EN 300 440-1 V1.6.1; EN 300 440-2 V1.4.1;
EN 300 328 V1.7.1; EN 301 511 V9.0.2; EN 301 908-1 V5.2.1; EN 301 908-2 V5.2.1

CE2200

Eveline Pupeter

CEO



emporia

10.04.2013, Linz/Austria

Emporia Telecom Produktions-
und Vertriebs-GmbH & CoKG

Industriezeile 36
4020 Linz, Austria

fon +43.732.77 77 17-0
fax +43.732.77 77 17-8

www.emporia.eu

CE2200

Subject to print errors, mistakes and technical changes. | PartNo.: 55367-ENG; ENGLISH; V88-IM-V1_G2-201307